

OPERATION INSTRUCTIONS FOR HANDHELD WIRELESS RF REMOTE CONTROLLER

FOR TOGGLE FEATURE SIGNS


XL-RF1



XLW-1060V



XLW-3020V

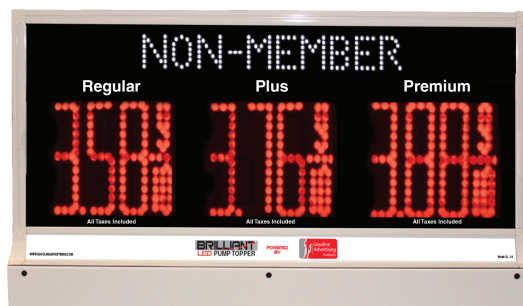

XLW-482EN



Step #1



Make sure all signs are On. Including the **M**aster (Signs are marked **M**=Master or **S**=Secondary)

You will notice the Sign toggles between 2 price levels e.g. cash/credit or Member/Non-Member etc. Turn on remote when the sign is displaying the price level you would like to edit.

Step #2



When remote is turned on, you will notice the first digit of the first grade immediately blinks. This indicates the sign is in edit mode. The sign will freeze at the price level you are editing. This will allow you to change prices.

Note: If no buttons are pressed for 7 seconds the sign will leave edit mode

Step #3



Use the Digit buttons ◀ and ▶ to scroll left or right across the numbers. Numbers will blink when selected. While scrolling ensure the proper digit is blinking before changing prices.

Step #4



Use the Price buttons ▼ and ▲ to increase or decrease the selected number to change fuel pricing

Step #5



Use the Product buttons ◀ and ▶ to jump between grades of gas. First number of each grade will blink when jumping between prices. Use the Digit buttons ◀ and ▶ to scroll within the selected grade.

Step #6



To change the price on a 1 product standalone **S**econdary sign, that is connected to a 3 products **M**aster. Using the same remote, press Product jump button ▶ 4 times to reach the first digit of the standalone sign. Then use appropriate buttons to edit pricing.

Turning Remote **ON** will activate Edit Mode. Turning Remote **OFF** will save prices and leave Edit Mode.