


MOTO-D Carbon Digital Tire Warmers

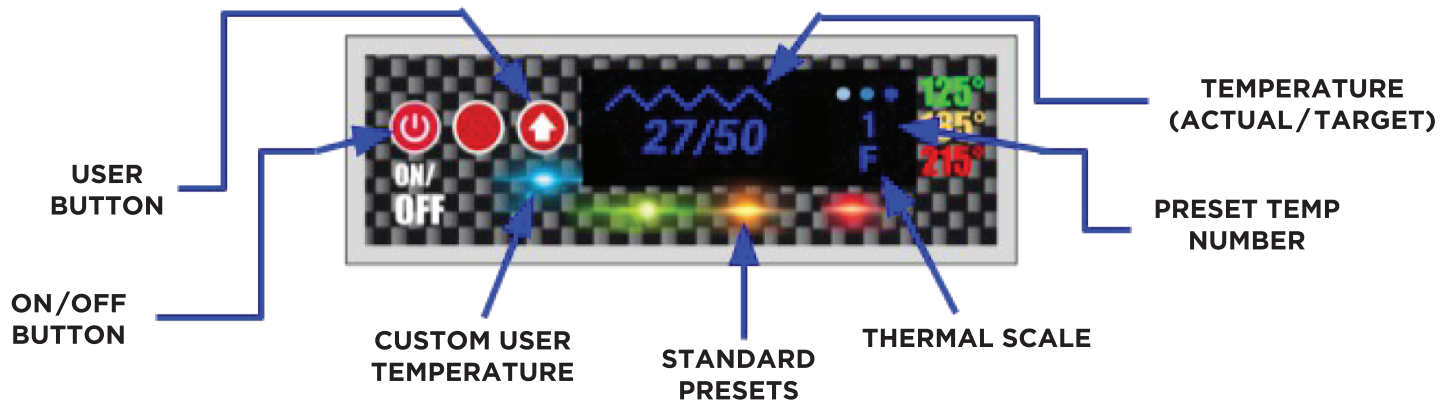

On the display, you'll find the following information...

- *Wave Symbol Heating:* On the top right side, a symbol will appear after a few seconds, flash while heating and stop when the target temperature is reached.
- *Temperature:* Actual shown to the left separated by a slash for the Target. Before choosing the target temperature (ON/OFF button), the word "OFF" appears.
- *Preset Temp Number:* Three (3) preset values, #1 (125° F), #2 (185° F), #3 (215° F) or U (customized user temperature) will be displayed under the indicator.
- Temperature Scale is displayed under the preset indicator; C= Celsius, F= Fahrenheit.
- *ON/OFF Button:* Press and hold ON/OFF button for two seconds.
- *Change Temperature:* Press and hold the ON/OFF button for almost two seconds and the temperature switches among 125° F, 185° F, 215° F, and if defined, a customized user temperature.
- *Change Fahrenheit/Celsius:* Press and hold the ON/OFF button and release once the scale has been changed. You'll see the symbols C and F on the right side of the display. By switching the temperature scale, you'll reset the stored customized user temperature. The flashing word "STORED" confirms the temperature scale has changed.

USER Button

- *Activation of customized user temperature:* Press the USER button for two seconds to activate the customized temperature. If a custom temperature has been stored it will be shown as the target temperature. If no custom temperature has been added the target will default to the lowest setting. Press the USER button to increase to the desired target temperature. Press and hold the USER button for two seconds. The word "STORED" flashes when the customized temperature is stored.

LED LIGHTS

- Green - 50° C / 125° F
- Amber - 80° C / 185° F
- Red - 100° C / 215° F
- Blue (User)

The LED lights flash when heating and are solid when the temperature is reached.



(845) 621-7177 • INFO@MOTODRACING.COM



/MOTODRACING